 


LC95 Recumbent General Assembly

LC95R-0100-30

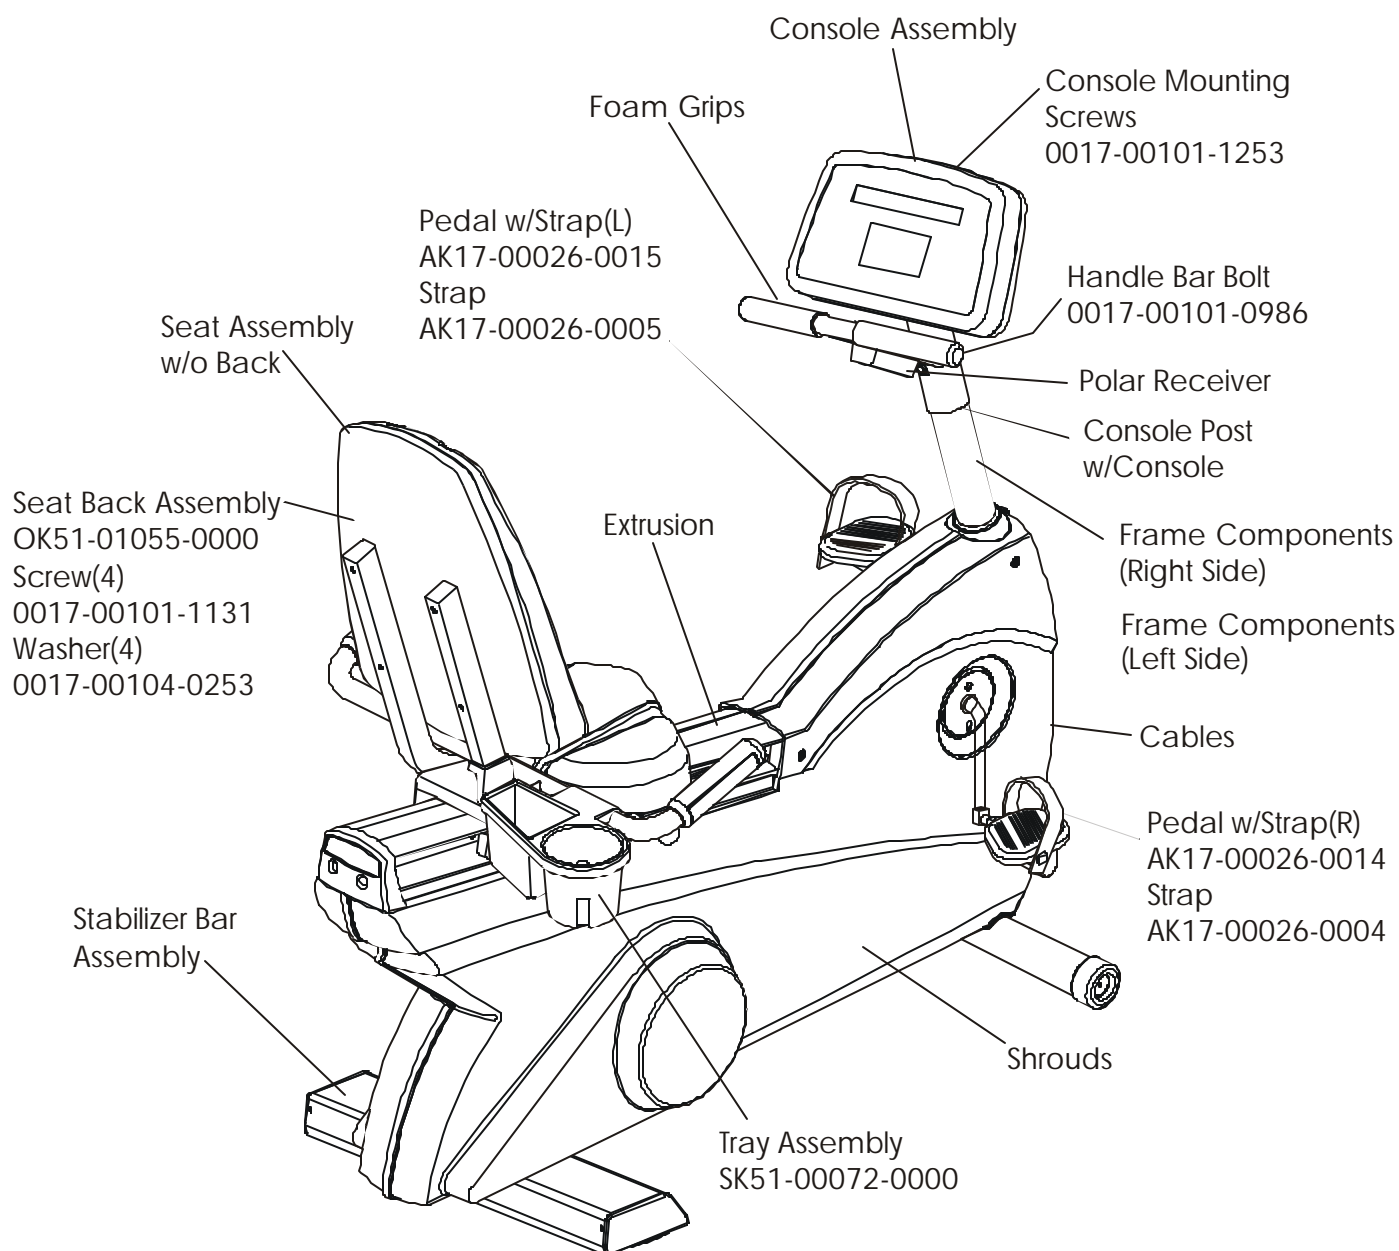



DESCRIPTION	PART NUMBER
Installation Instructions	M051-00K20-B155
Operation Manual	M051-00K20-B125
Service Manual	M051-00K51-D008
Bag Assembly	AK51-00017-0000

Display Console

AK51-00087-0001(R) Eng/Met
AK51-00087-0003 Ger/Met
AK51-00087-0004 Spn/Eur
AK51-00087-0005 Spn/Met
AK51-00087-0006 Jap/Met
AK51-00087-0007 Frn/Eur
AK51-00087-0008 Itl/Met
AK51-00087-0009 Dut/Met
AK51-00087-0010 Frn/Met

Overlay Bezel

  
SK51-00093-0001Eng/Met
AK51-00093-0003 Ger/Met
AK51-00093-0004 Spn/Eur
AK51-00093-0005 Spn/Met
AK51-00093-0007 Frn/Eur
AK51-00093-0008 Itl/Met
AK51-00093-0009 Dut/Met
AK51-00093-0010 Frn/Met

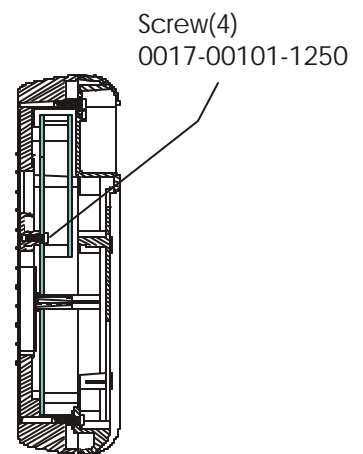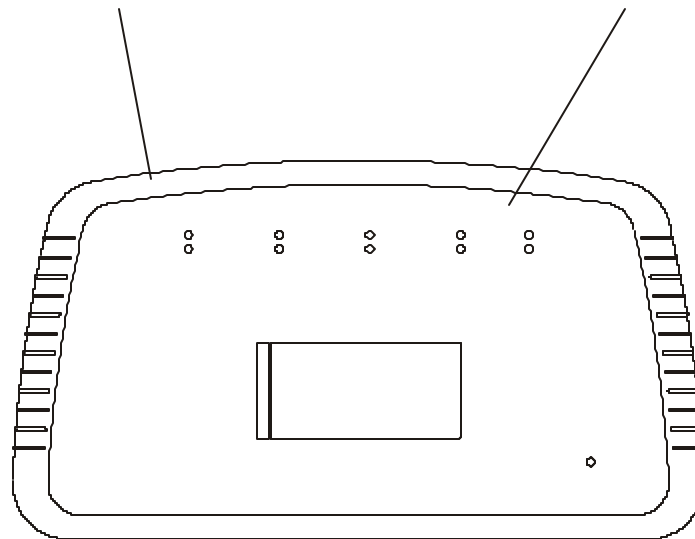

Console Case (Black)
OK36-01187-0008

Screw
0017-00101-0393

 
Battery Cover
OK36-01035-0006

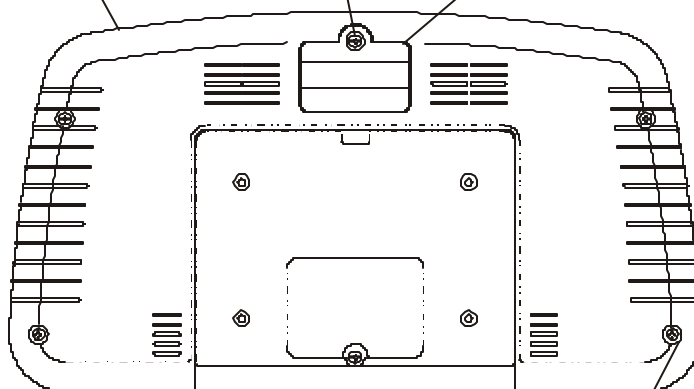

Screw
0017-00101-0823 (4)


LC95 Recumbent Frame Components - Right Side

 LC95R-0100-30

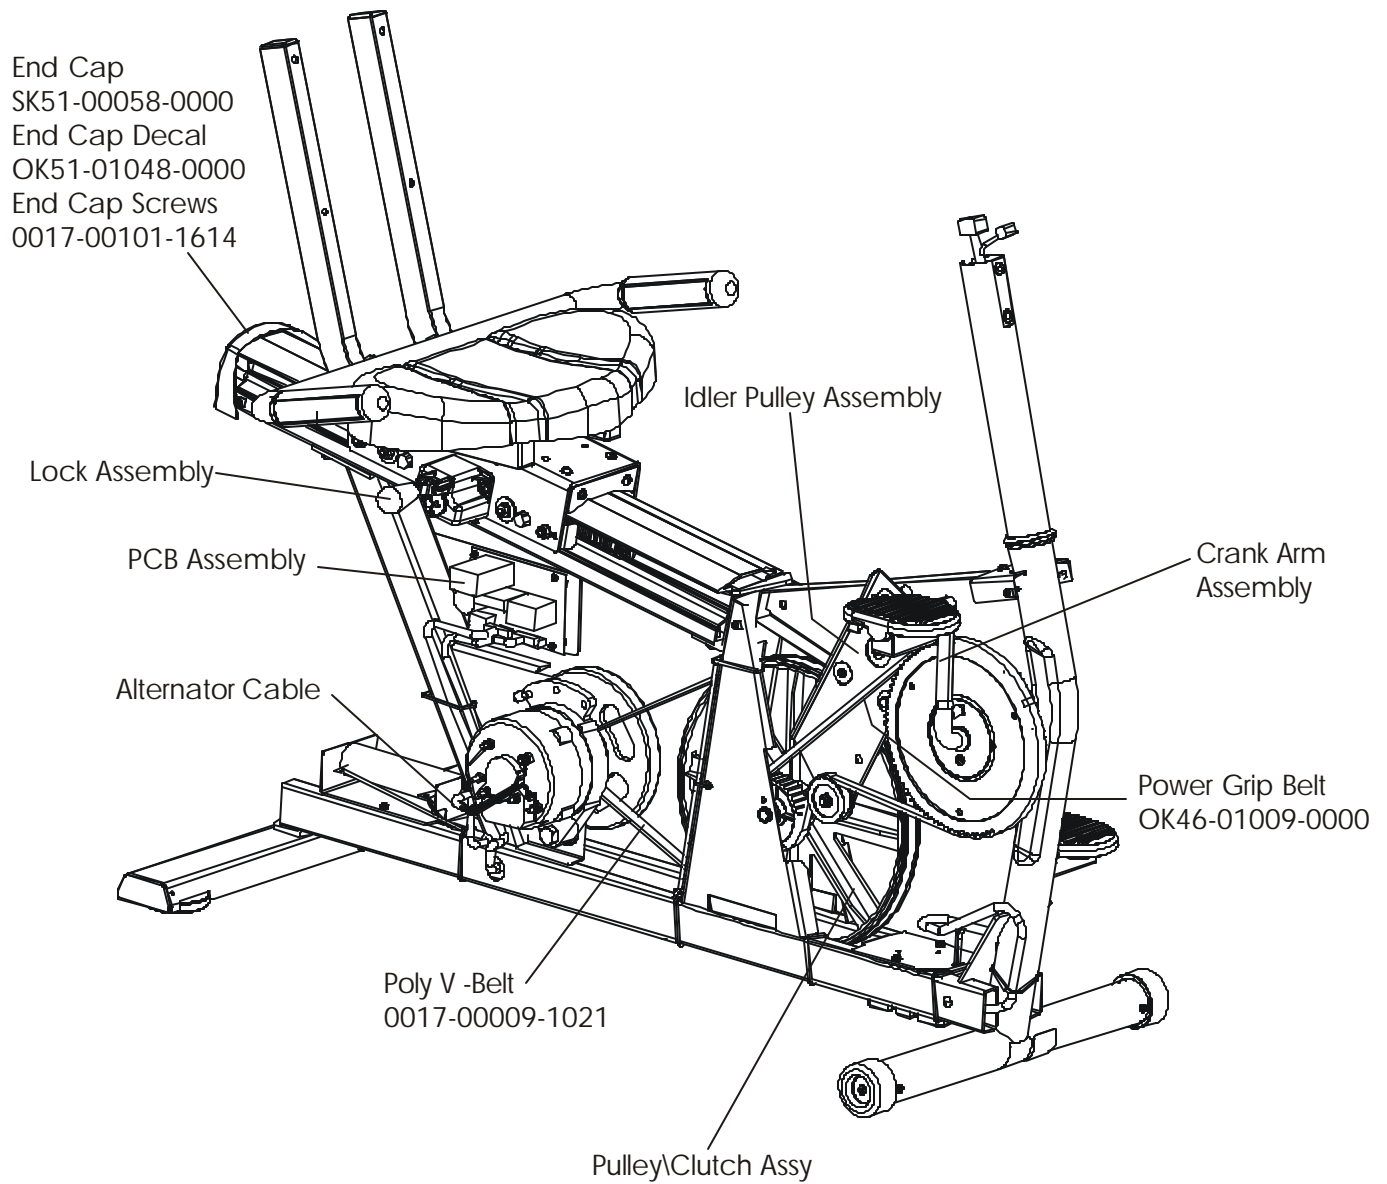


LC95 Recumbent Frame Components - Left Side

 
LC95R-0100-30

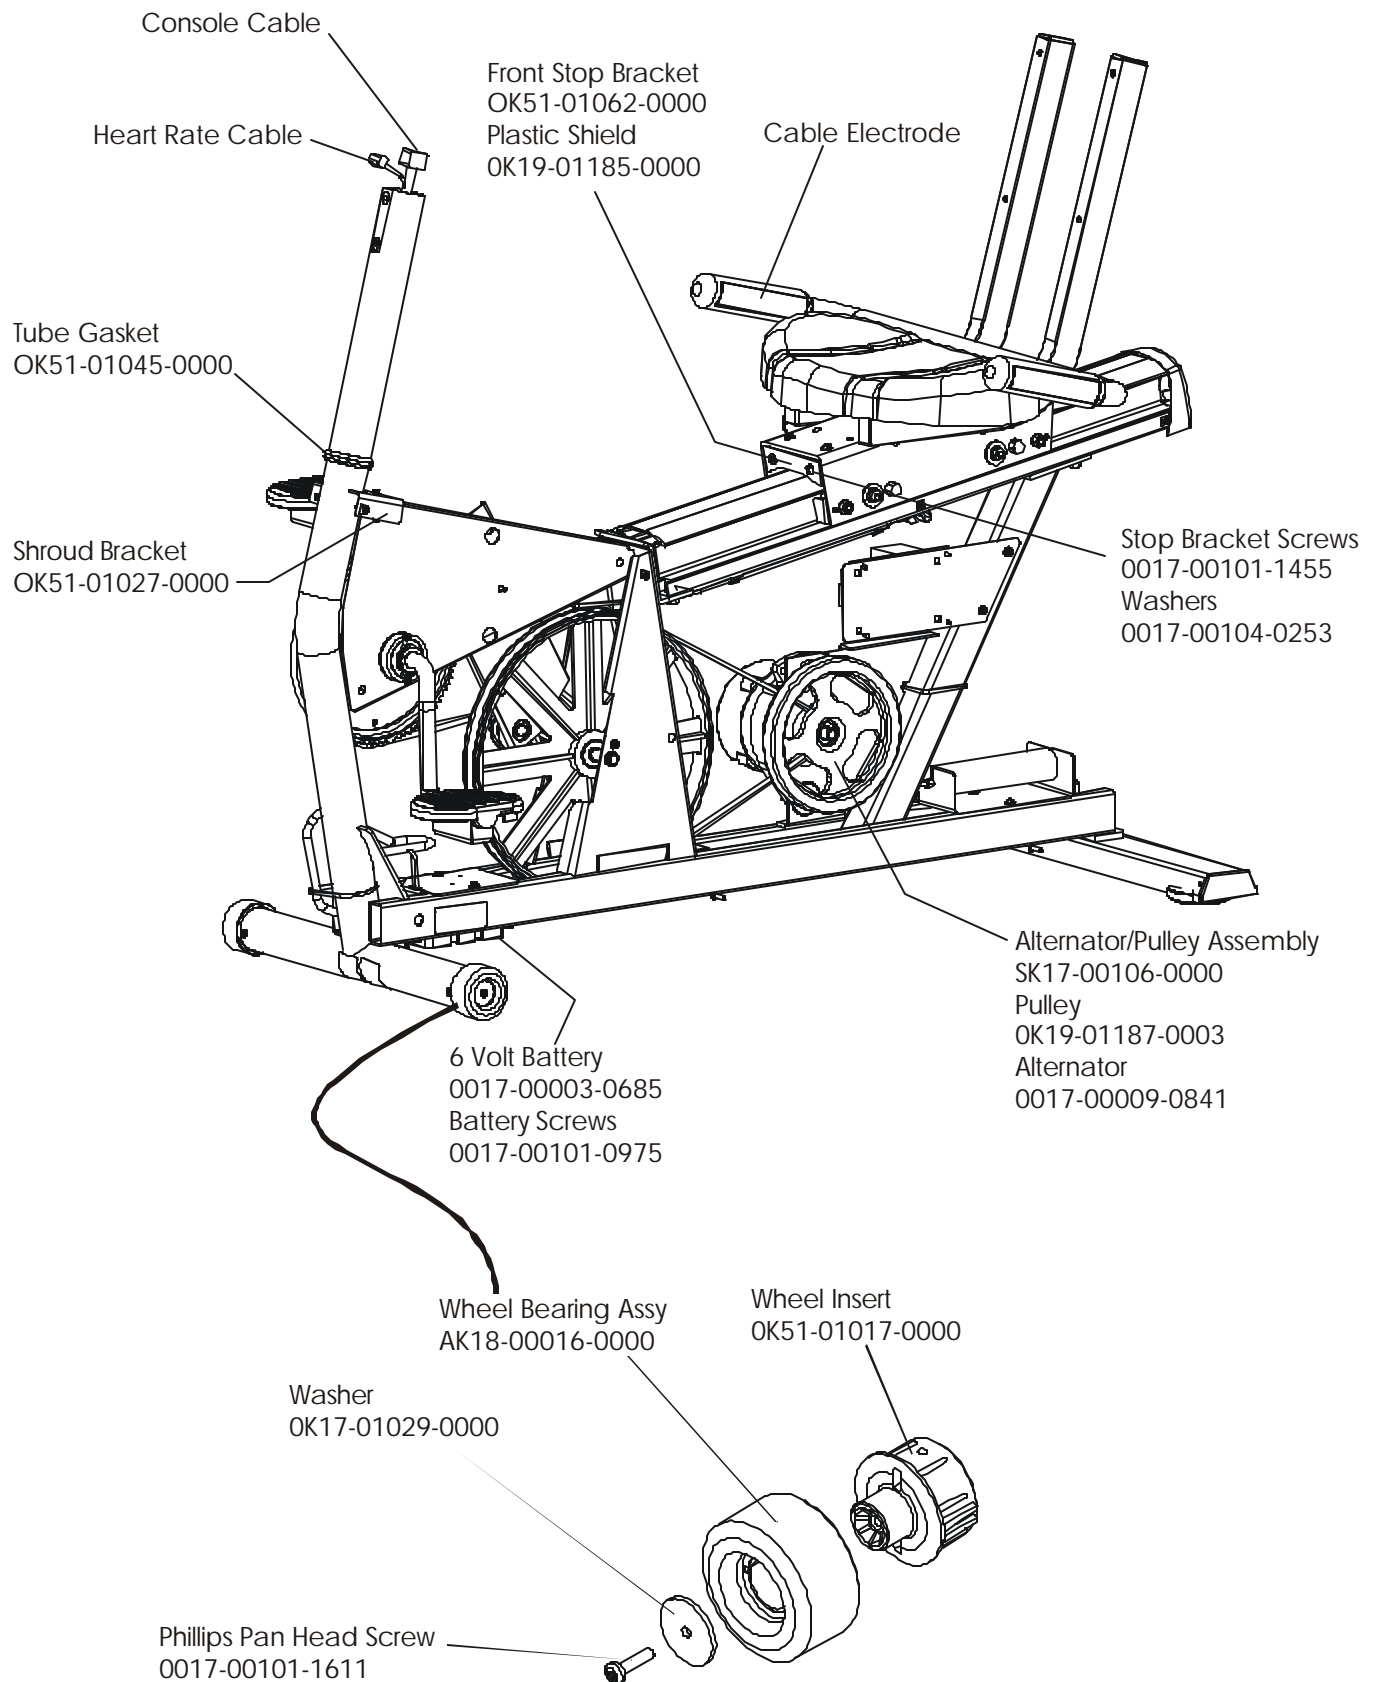


LC95 Recumbent Extrusion Tube

  
LC95R-0100-30

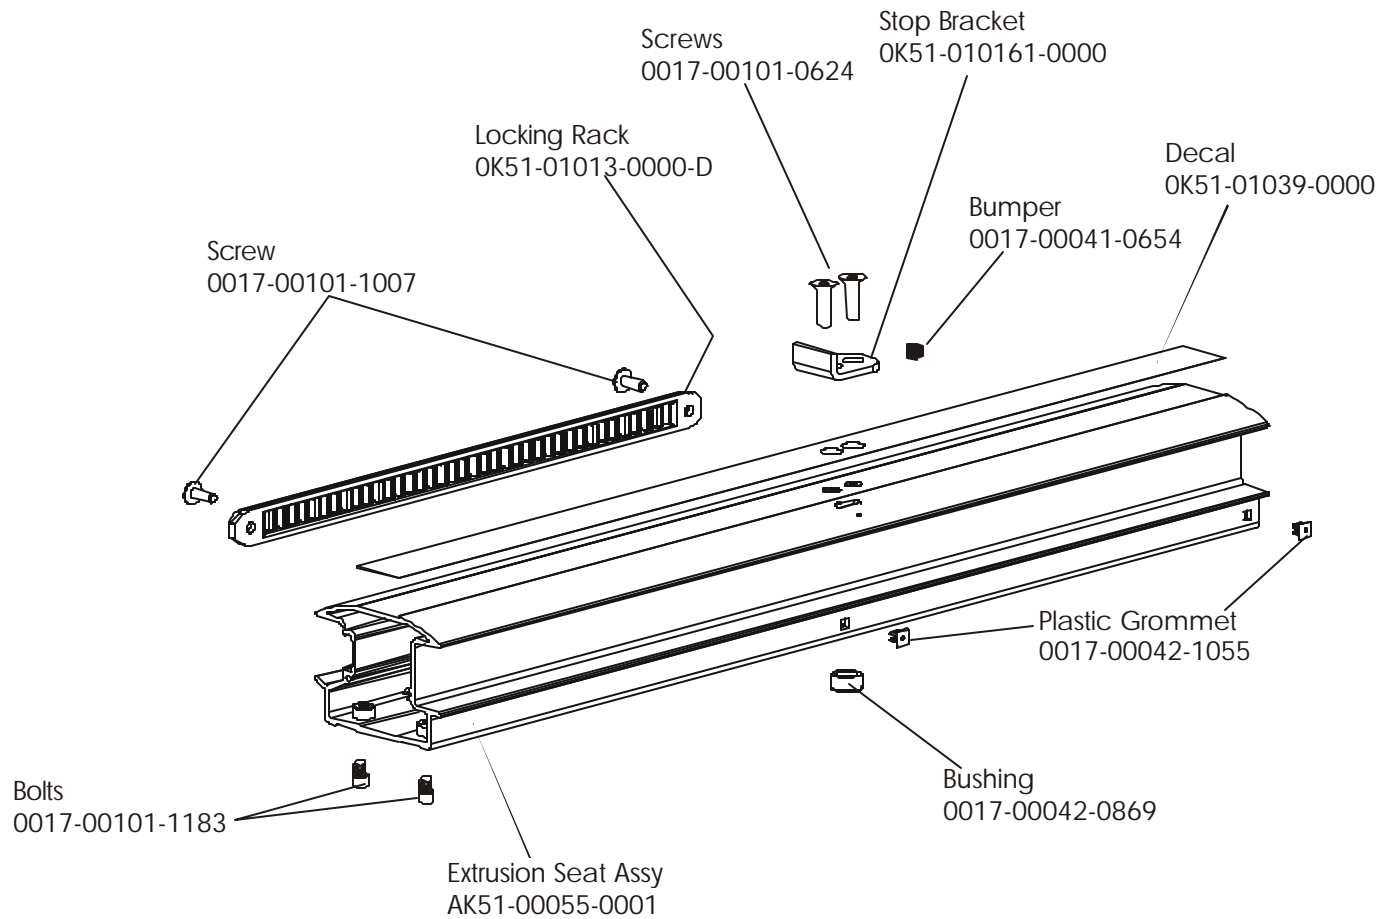

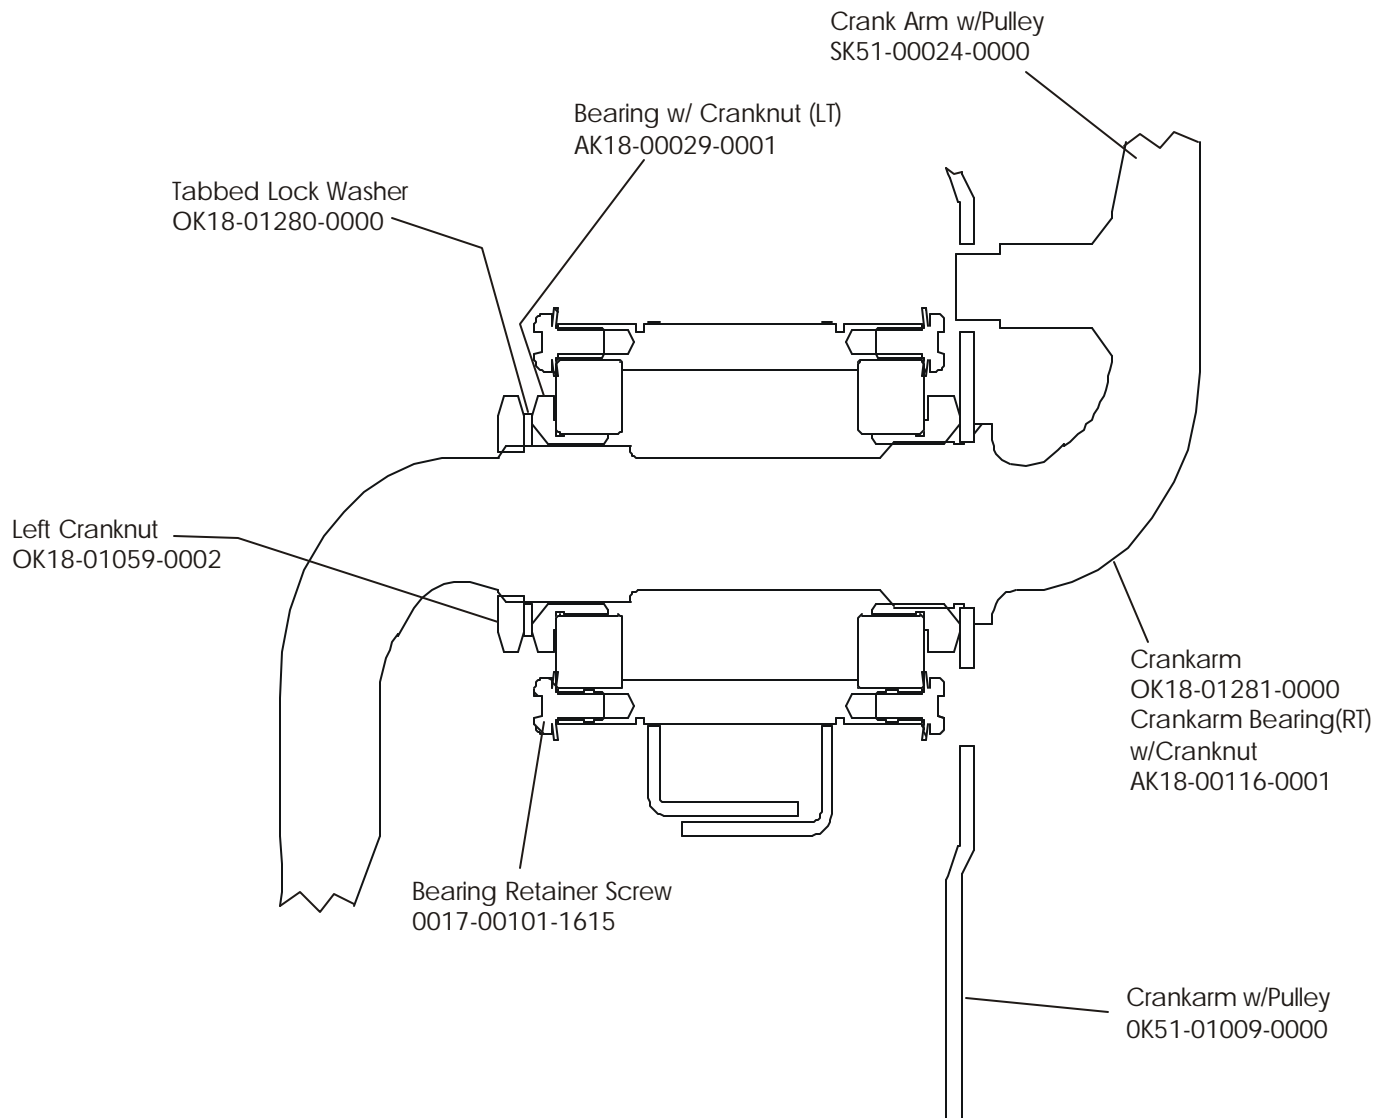

  
NOTE: Order Crank Bearing Kit GK51-00002-0001

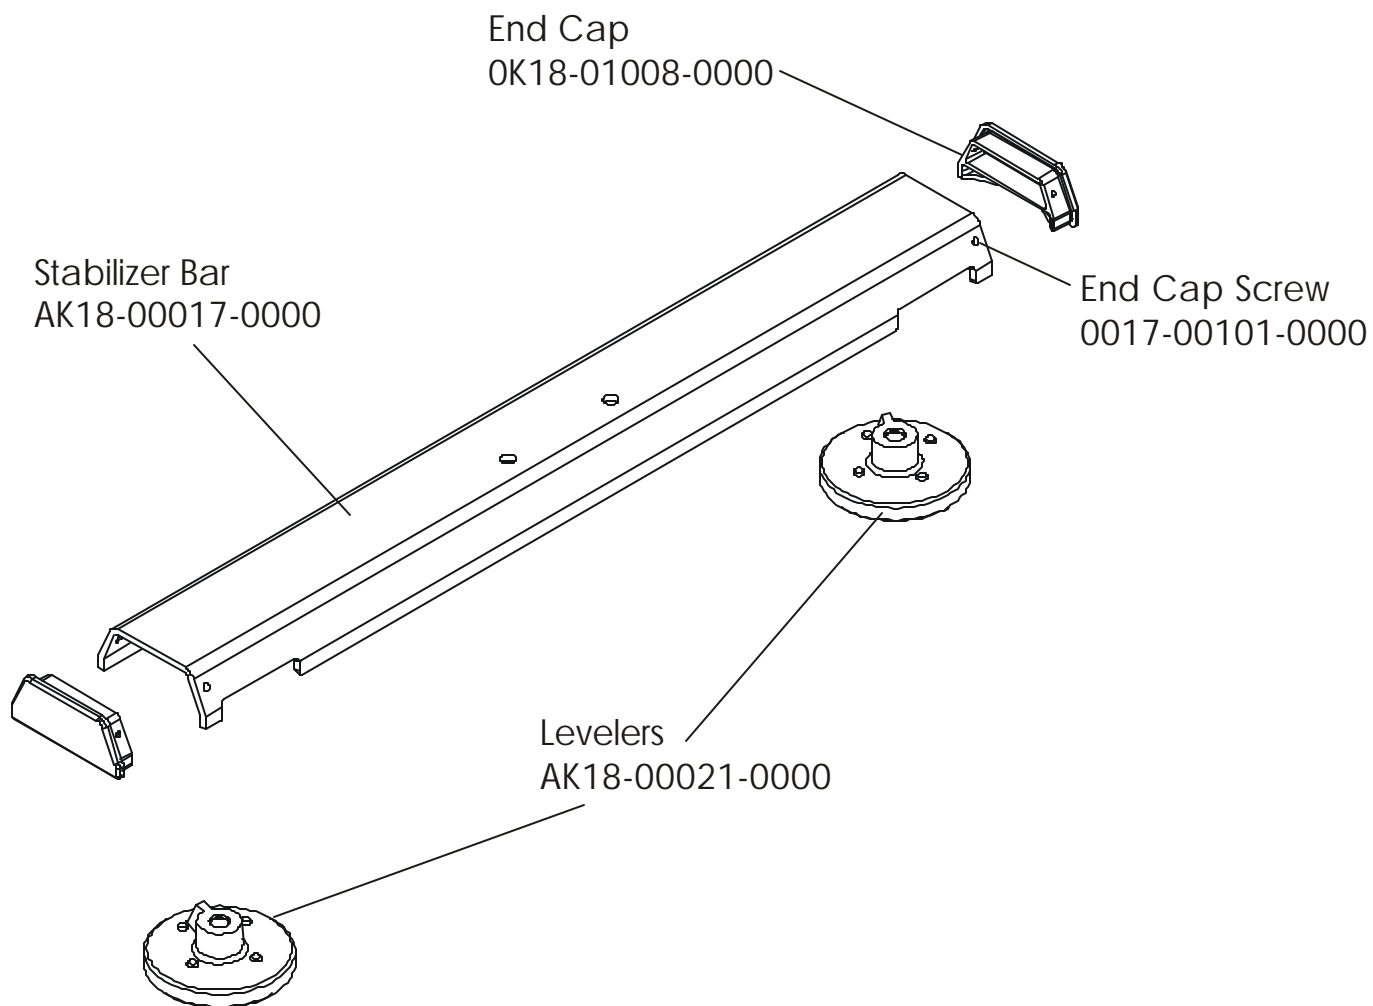


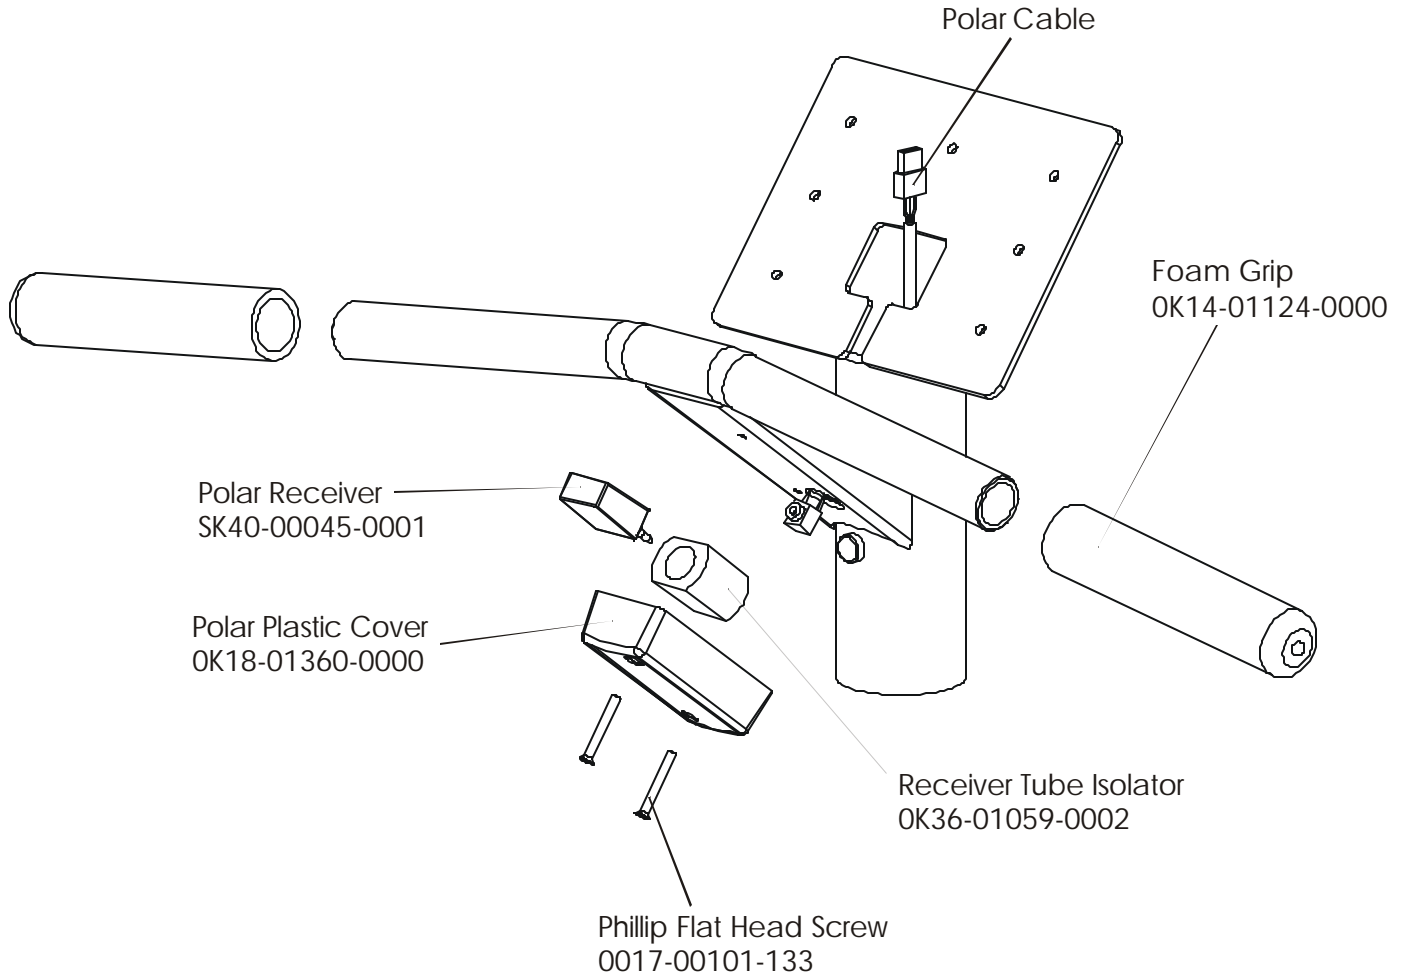


LC95 Recumbent Seat Assembly AK51-00011-0000

   LC95R-0100-30

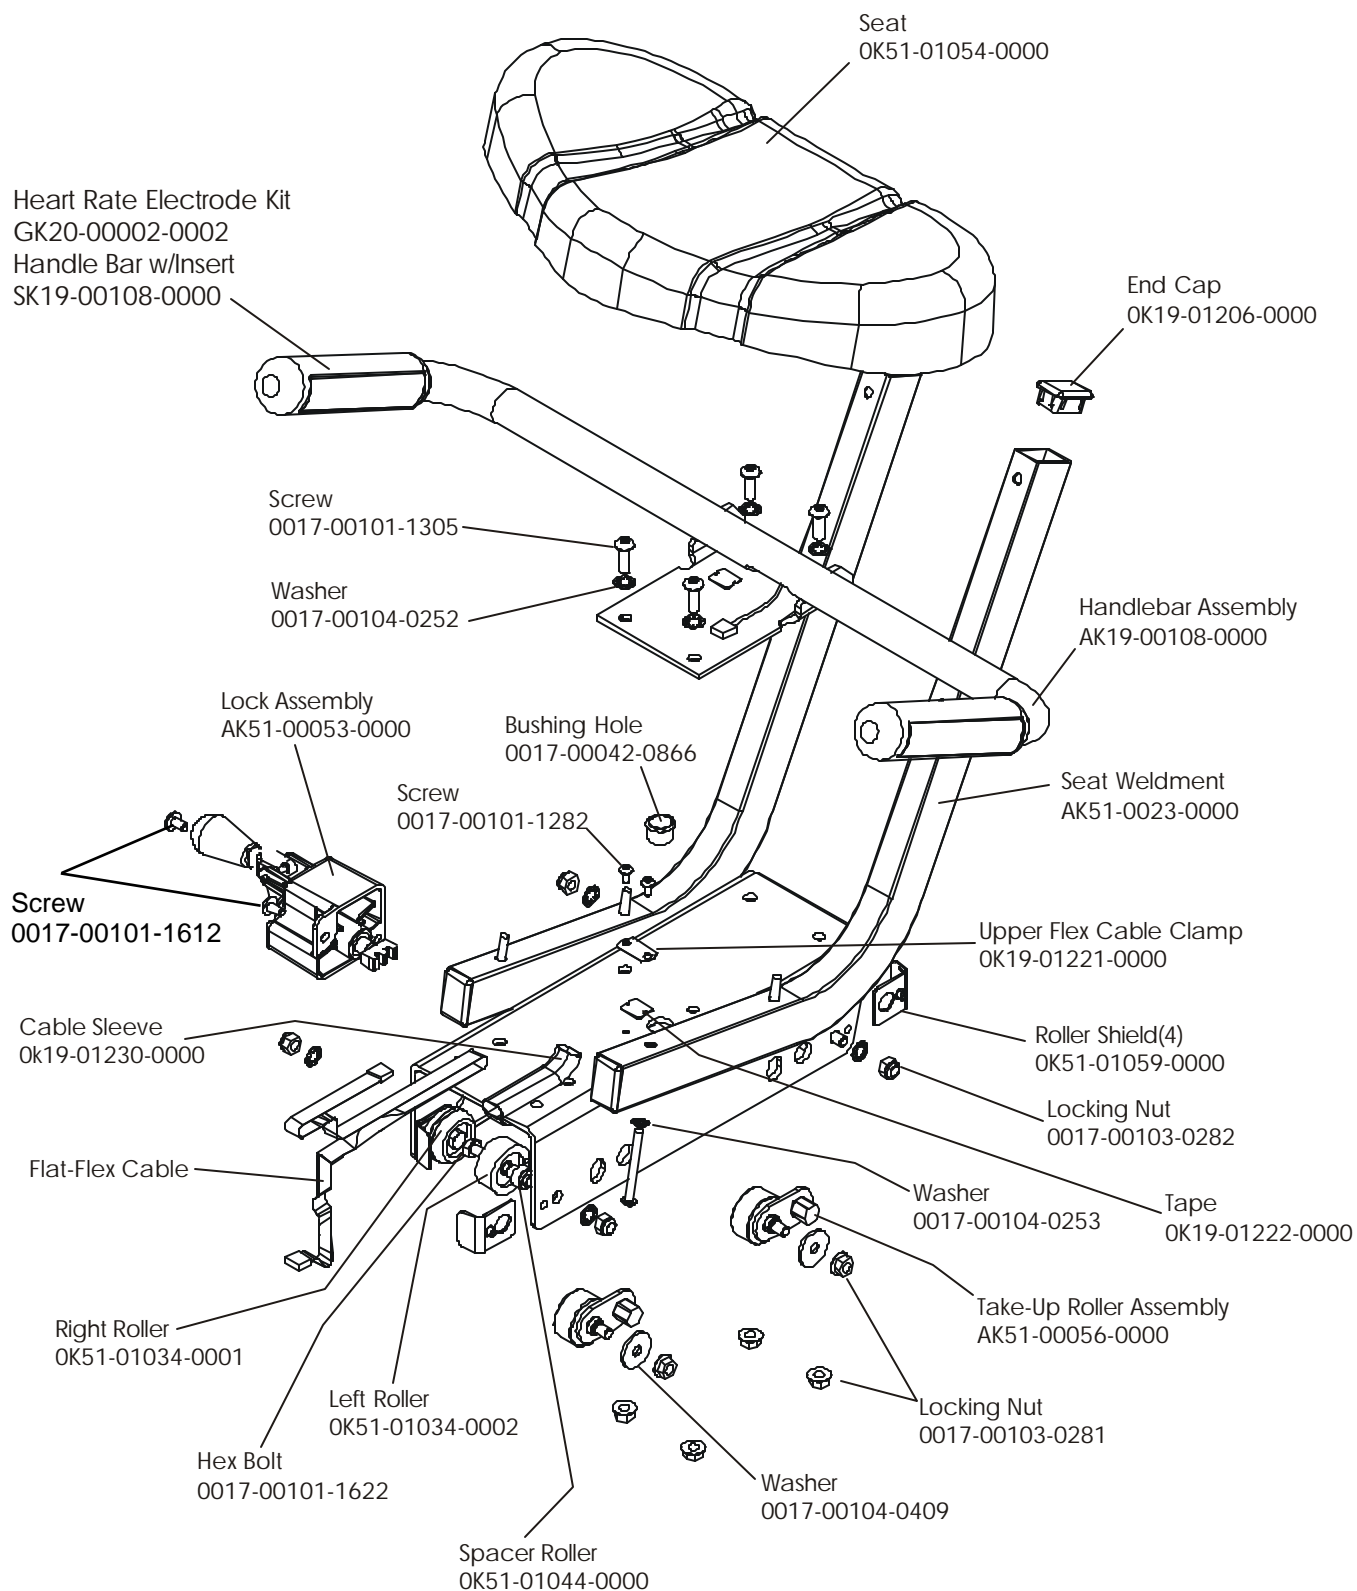


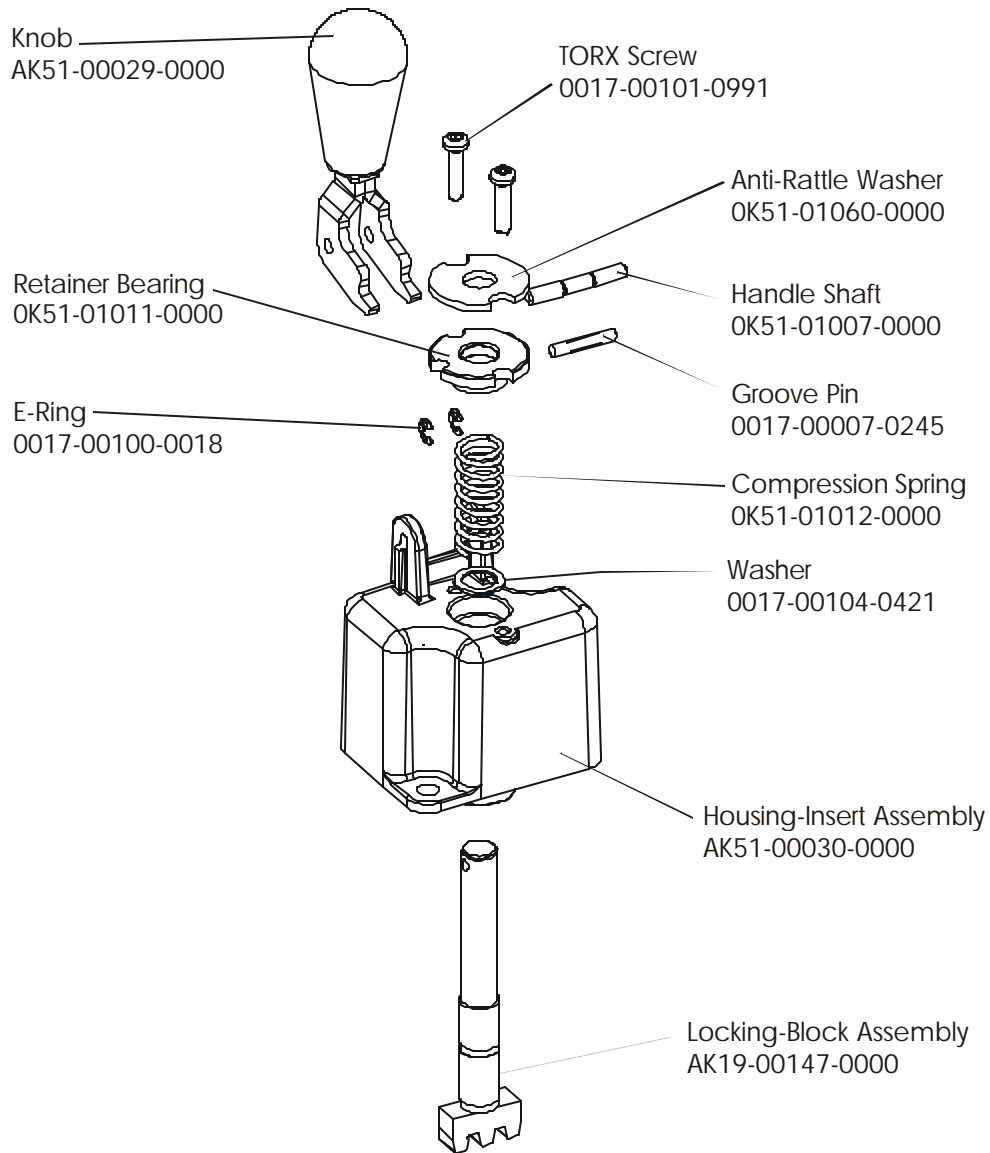


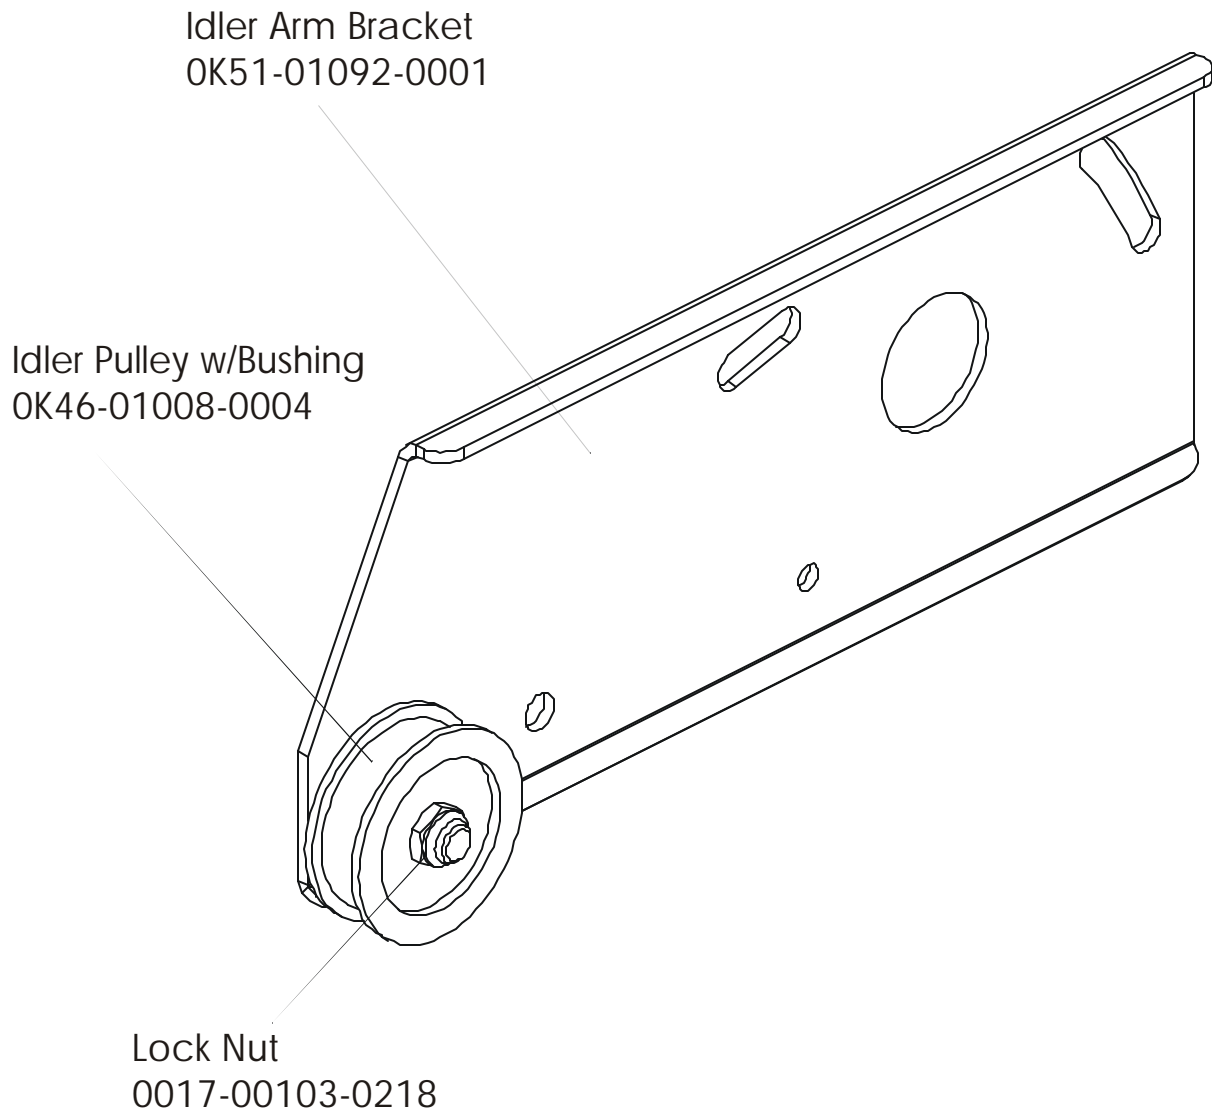


LC95 Recumbent Pulley Clutch Assembly

   LC95R-0100-30

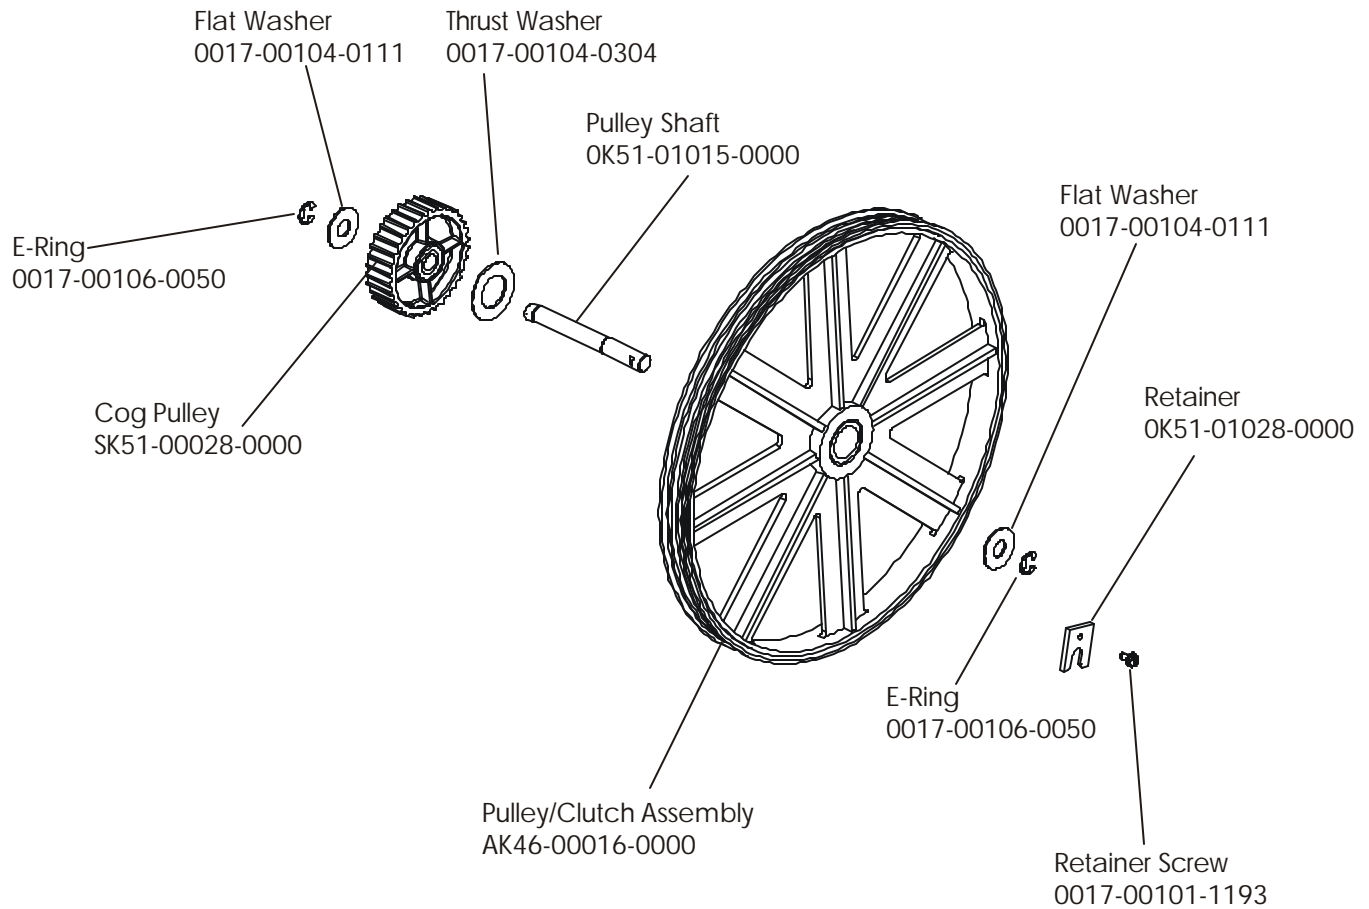

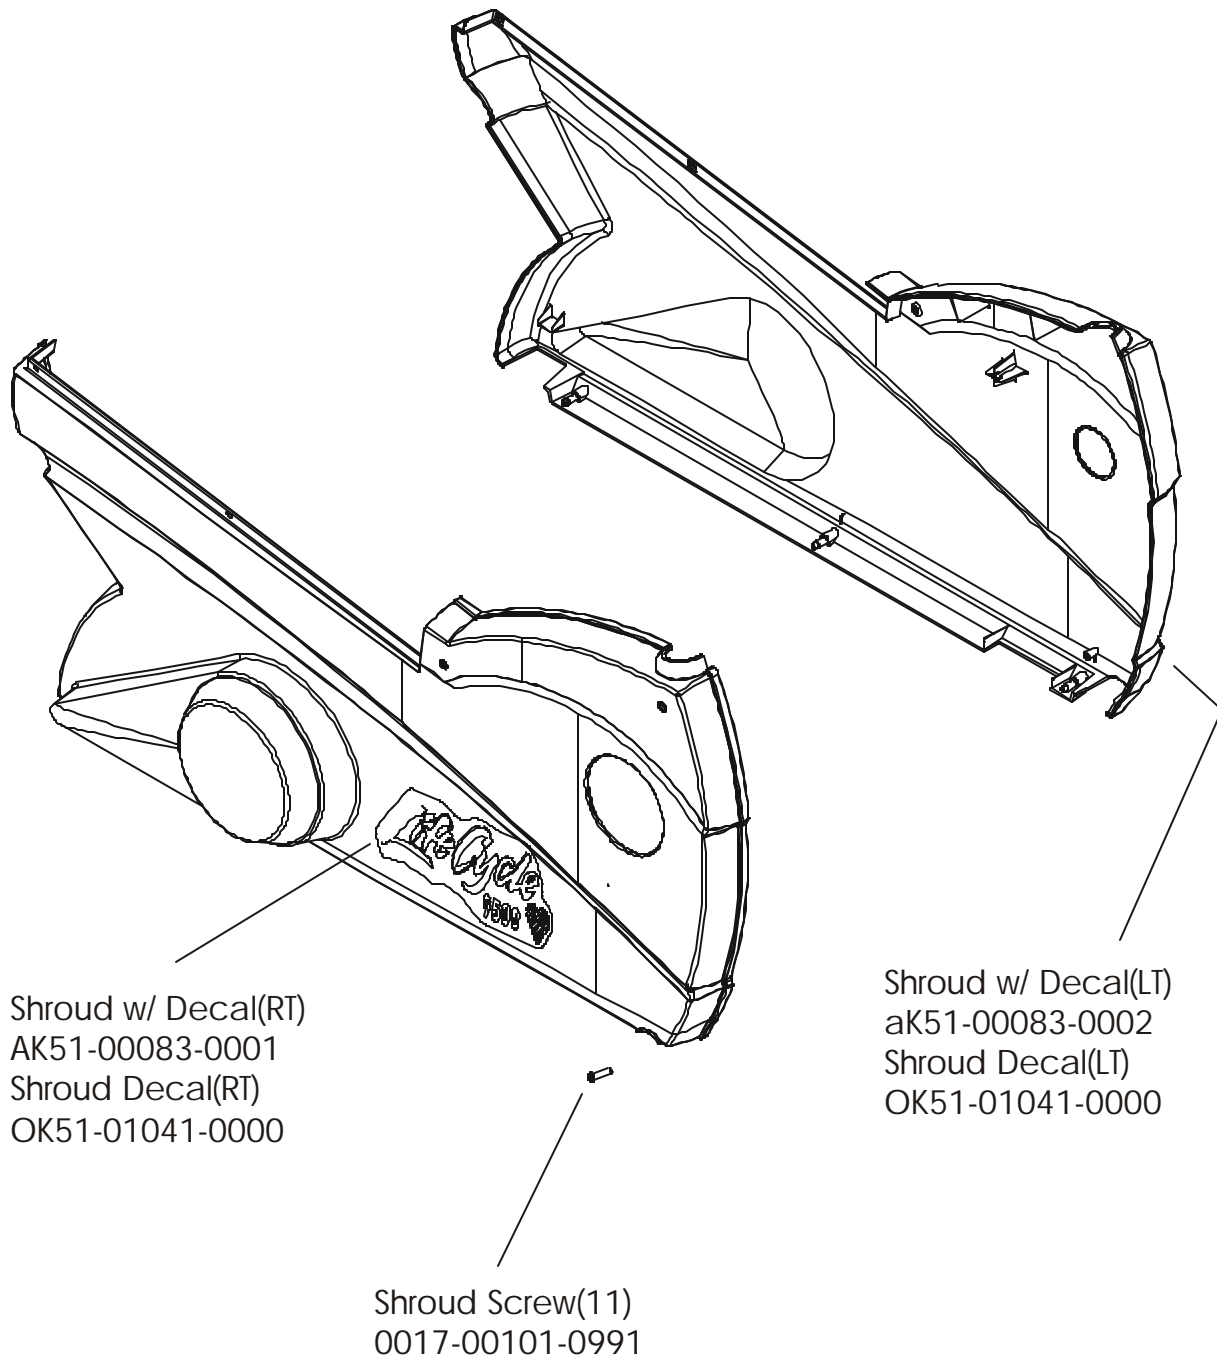

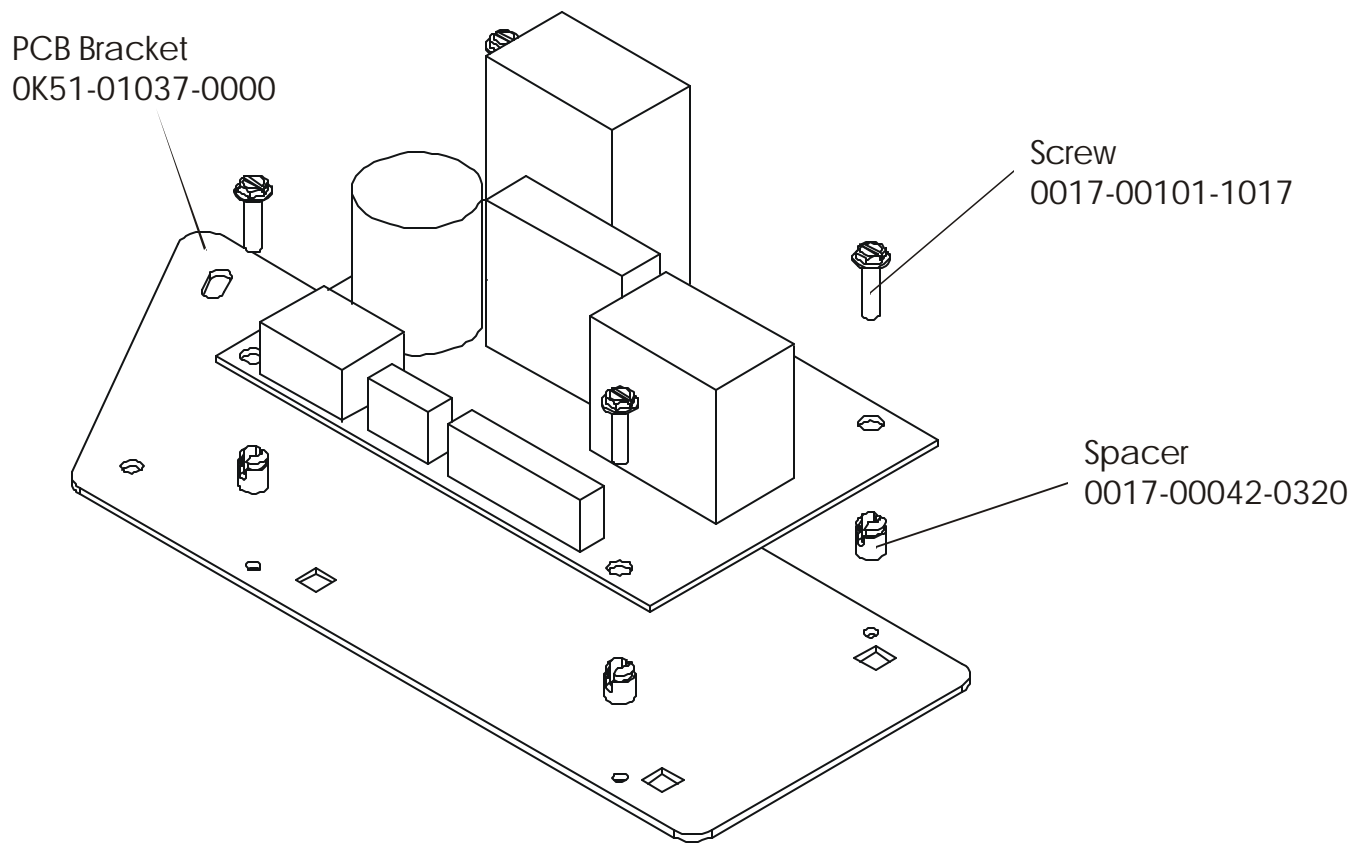

LC95 Recumbent Cables

LC95R-0100-30

Polar Cable
AK36-00021-00002

